



PHAROS UP AND DOWN WALL LIGHT INSTALLATION GUIDE

Product codes: 60924, 09081

INSTRUCTIONS FOR USE AND INSTALLATION GENERAL INFORMATION & TECHNICAL SPECIFICATIONS

PRODUCTS MANUFACTURED IN EU

- 230V ~ 50Hz
- Class I
- GU10 porcelain socket
- Not intended for mesh connection
- Intended for connection to fixed wiring
- Double-protection 3G1.5 power cord should be used for the connection of the light fixture
- Power cord not included

GENERAL INFORMATION ABOUT SAFETY

- Before any work turn off the mains supply
- Installation should only be carried out by a qualified electrician, who should be aware of the current Regulations on Internal & External Installations
- In case of glass breakage, replace immediately
- Never exceed the Watts (W) specified on the light fixture
- Lamp power should not exceed the power indicated on the label of the fixture or on the package
- The product should be connected to a line protected by a differential current circuit, while the nominal persistent operating current should not exceed 30mA (leakage relay).

Included in the package:

- 1 Light fixture
- 2 sets of plugs-screws for wall mounting
- 1 waterproofing rubber



LIGHT FIXTURE INSTALLATION

A. FIXING THE FIXTURE ON A MOUNTING SURFACE

- Open the base of the light fixture by unscrewing the allen screws on its sides.
- Remove the cable clamp from the base.
- Using the base as an installation guide, mark the surface on which you wish to mount the fixture. Drill holes into the mounting surface and insert the wall-plugs into the holes.
- Place the waterproofing rubber into the base.
- Pass the power cord through the waterproofing rubber.
- Fasten the base onto the mounting surface by screwing the supplied screws into the wall-plugs.

B. CONNECTING OF POWER CORD

- Replace the cable clamp inside the base.
- Connect the line (brown) and neutral (blue) wires to the cable clamp and the grounding wire (yellow) to the body of the light fixture next to the grounding symbol \perp , using the supplied screw and M4 washer.
- Screw the body of the light fixture onto the base with the allen screws.
- Remove the glass cover(s) of the light fixture by unscrewing it.
- Remove the spring(s) used for holding the lightbulb in place.
- Place the GU10 lightbulb(s) into the GU10 socket.
- Replace the spring(s) and the glass cover(s) of the light fixture.
- Turn on the power supply.

C. REPLACE THE LIGHTBULB

- Turn off the mains supply.
- Do not try to replace the lightbulb unless it has completely cooled down as it may cause serious burns on the skin.
- Open the lightbulb's cover.
- Twist and pull the lightbulb gently.
- Do not touch the lightbulb with bare hands.
- Always use clean protective gloves when handling a lightbulb.
- Use a clean towel to clean the bulb in case you touch it accidentally.
- When replacing the lightbulb, twist it very carefully while it is still in the lamp holder.
- Before feeding again with power, replace the lightbulb's cover to maintain the impermeability of the fixture.

The manufacturer bears no responsibility for any injury or damage resulting from incorrect installation or use of the product.



Navigator