


Lampfix

Metal & PVC Pendant Installation Instructions

Applies to all pendants in the Metal & PVC range - 05752, 05751, 05029.

Step 1

Start with the live feed. Ensure it is switched off at the mains. Test the cable end is not live. If in any doubt about wiring consult a qualified electrician.

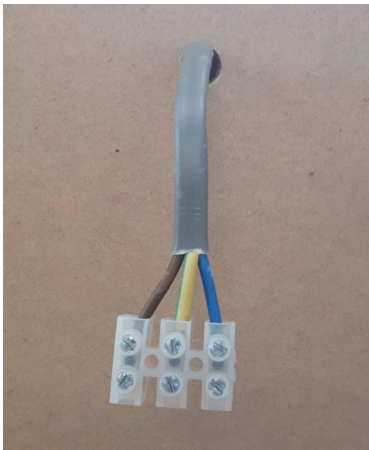

Step 2

Detach the bracket from the pendant rose by undoing the grub screws




Address (HQ & Warehouse): Quintex & Lampfix, Unit 6 Fen End, Stotfold, Hitchin, Herts. SG5 4BA

Tel: 01462 731 173 | Fax: 01462 731 120 | Email: mail@lampfix.co.uk | Website: lampfix.co.uk


Step 3

Fix the bracket to the ceiling next to the feed.

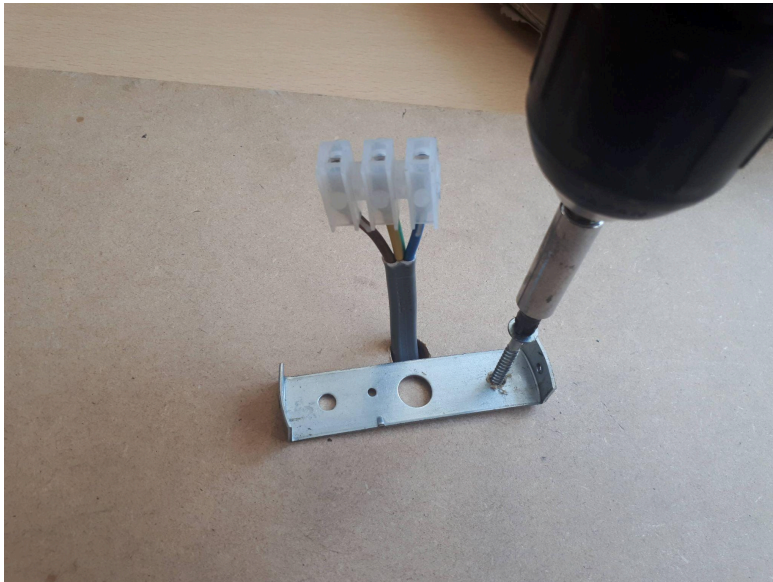

Step 4

Use 2 fixings compatible with the ceiling type.

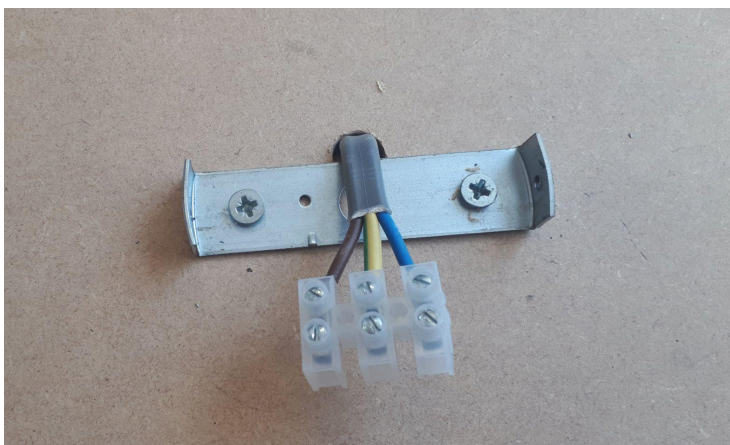

Lampfix

Step 5

Connect the 3 cores from the pendant to the feed. The pendant cores are colour-coded: Live is brown, Neutral is blue and Earth is green/yellow. They must match the feed.



Step 6

Feed the wire up into the ceiling as much as possible. Push the terminal block up towards the bracket. Position metal pendant rose cover plate over the bracket, with the grub screw holes lining up.




Address (HQ & Warehouse): Quintex & Lampfix, Unit 6 Fen End, Stotfold, Hitchin, Herts. SG5 4BA

Tel: 01462 731 173 | Fax: 01462 731 120 | Email: mail@lampfix.co.uk | Website: lampfix.co.uk

Step 7

Tighten the first grub screw through the plate into the bracket

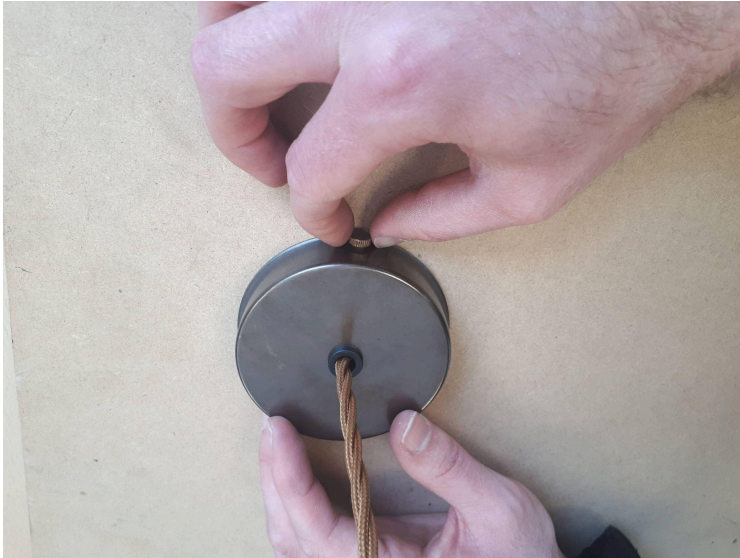

Step 8

Tighten the second grub screw on the other side of the bracket.



Lampfix

Step 9

The pendant is now ready for use. You can test it and fit the lamp.



If in any doubt about wiring consult a qualified electrician.

Address (HQ & Warehouse): Quintex & Lampfix, Unit 6 Fen End, Stotfold, Hitchin, Herts. SG5 4BA

Tel: 01462 731 173 | Fax: 01462 731 120 | Email: mail@lampfix.co.uk | Website: lampfix.co.uk